




Cable to Gate Control Board **NOT** supplied. Recommend using 2.5mm² Core up to 15mtrs, 4mm² Core up to 25mtrs and 6mm² Core up to 35mtrs. Isolator Switch Rated at 10Amp minimum also recommended.

(-) (+) (-) (+)

Solar Panel Cables supplied are 4mm² Core with MC4 Connectors fitted to allow for connection to other panels or the charge controller

Battery Cables Supplied are 4mm² Core at 5mtr length c/w 15A Blade Fuse and Holder, 8mm 'O' Ring Battery Connectors and a 4mm² Core at 200mm length Battery Link Cable with 8mm 'O' Ring Battery Connectors at either end


(+) (-) (+) (-)

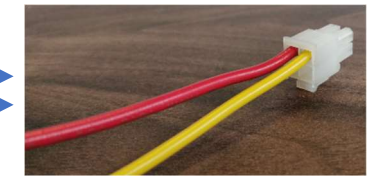

The Molex Connector and 300mm Cable supplied is a direct connection into the following Control Boards:

- C720
- C721
- B614
- B680 (in conjunction with part number 390080)

 For the E124 Control Board, please wire the load directly into the battery terminals (taking care of polarity), using spade connectors (not supplied).



If the E124 is connected to mains power at the same time, EasyBoard software must be used to disable the on board charging of the Battery as this will damage the charge controller and not be covered under warranty.