


J200 HA

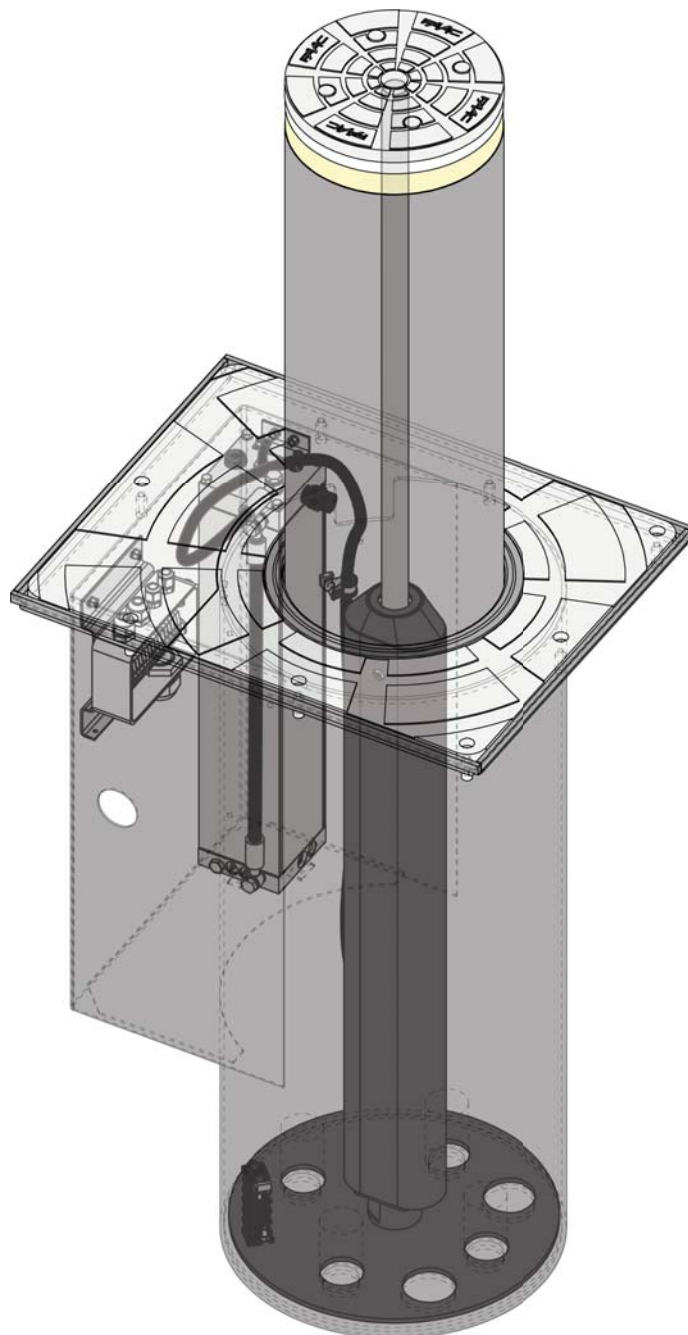

FAAC

CE DECLARATION OF CONFORMITY FOR MACHINES**(DIRECTIVE 2006/42/EC)****Manufacturer:** FAAC S.p.A.**Address:** Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY**Declares that:** the operator mod. J200 HA

is built to be integrated into a machine or to be assembled with other machinery to create a machine under the provisions of Directive 2006/42/EC;

conforms to the essential safety requirements of the following EEC directives:


2006/95/EC Low Voltage Directive

2004/108/EC Electromagnetic Compatibility Directive

and also declares that it is prohibited to put into service the machinery until the machine in which it will be integrated or of which it will become a component has been identified and declared as conforming to the conditions of Directive 2006/42/EEC and subsequent amendments.

Bologna, 01st September 2012

The Managing Director
A. Marcellan



ENGLISH

CE DECLARATION OF CONFORMITY FOR MACHINES**Manufacturer:** FAAC S.p.A.**Address:** Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY**Declares that:** the control unit 624BLD

• conforms to the essential safety requirements of the following EEC directives:

2006/95/EC Low Voltage Directive

2004/108/EC Electromagnetic Compatibility Directive

Additional note:

This product underwent tests in a typical homogenous configuration
(all products manufactured by FAAC S.p.A.).

Bologna, 01st September 2012

The Managing Director
A. Marcellan



WARNINGS FOR THE INSTALLER

GENERAL SAFETY OBLIGATIONS

1. **ATTENTION! To ensure the safety of people, it is important that you read all the following instructions. Incorrect installation or incorrect use of the product could cause serious harm to people.**
2. Carefully read the instructions before beginning to install the product.
3. Do not leave packing materials (plastic, polystyrene, etc.) within reach of children as such materials are potential sources of danger.
4. Store these instructions for future reference.
5. This product was designed and built strictly for the use indicated in this documentation. Any other use, not expressly indicated here, could compromise the good condition/operation of the product and/or be a source of danger.
6. FAAC declines all liability caused by improper use or use other than that for which the automated system was intended.
7. Do not install the equipment in an explosive atmosphere: the presence of inflammable gas or fumes is a serious danger to safety.
8. For non-EU countries, to obtain an adequate level of safety, the Standards mentioned above must be observed, in addition to national legal regulations.
9. FAAC is not responsible for failure to observe Good Technique in the construction of the closing elements to be motorised, or for any deformation that may occur during use.
10. Installation must be performed in compliance with current Standards.
11. Before attempting any job on the system, cut out electrical power.
12. The mains power supply of the automated system must be fitted with an all-pole switch with contact opening distance of 3 mm or greater. Use of a 6A thermal breaker with all-pole circuit break is recommended.
13. Make sure that a differential switch with threshold of 0.03 A is fitted upstream of the system.
14. Make sure that the earthing system is perfectly constructed and connect metal parts of the closure to it.
15. The automated system is supplied with an intrinsic anti-crushing safety device consisting of a torque control. Nevertheless, its tripping threshold must be checked as specified in the Standards indicated at point 10.
16. The safety devices (EN 12978 standard) protect any danger areas against **mechanical movement Risks**, such as crushing, dragging, and shearing.
17. Use of at least one indicator-light (i.e. flashing lamp incorporated in the bollard head) is recommended for every system, as well as a warning sign adequately secured to the frame structure, in addition to the devices mentioned at point "16".
18. FAAC declines all liability as concerns safety and efficient operation of the automated system, if system components not produced by FAAC are used.
19. For maintenance, strictly use original parts by FAAC.
20. Do not in any way modify the components of the automated system.
21. The installer shall supply the user with the necessary information for the manual operation of the system in the event of emergency
22. Do not allow children or adults to stay near the product while it is operating.
23. Keep remote controls or other pulse generators away from children, to prevent the automated system from being activated involuntarily.
24. Transit on the bollard is permitted only when the device is completely down.
25. The user must not attempt any kind of repair or direct action whatever and contact qualified personnel only.
26. **Anything not expressly specified in these instructions is not permitted.**

INDEX

1	GENERAL NOTES	3
2	DESCRIPTION AND TECHNICAL SPECIFICATIONS.....	3
3	DIMENSIONS.....	4
4	FACILITIES.....	4
5	ELECTRIC WIRING	6
6	MANUAL OPERATION.....	9
7	AUTOMATIC OPERATION	9
8	MAINTENANCE.....	9
9	ELECTRICAL CONNECTIONS	10
10	PRE-SETTING SELECTION.....	11
11	POSITIONING THE LOOPS	11
12	CONNECTING MORE BOLLARDS	12
	12.1 CONNECTION OF UP TO 4 BOLLARDS ON A SINGLE BOARD.....	12
	12.2 CONNECTION OF UP TO 8 BOLLARDS ON TWO 624BLD MASTER – SLAVE CONNECTION	12
	12.3 WIRING OF UP TO 4 BOLLARDS ON A SINGLE BOARD	13
	12.4 WIRING OF UP TO 8 BOLLARDS ON TWO 624BLD IN MASTER – SLAVE CONNECTION	14
13	TROUBLESHOOTING.....	15
14	CLEANING / UNMOUNTING PROCEDURE.....	15

J200 HA BOLLARD



Please read with the utmost care this manual supplied with the product, since it contains important indications about safety, installation, use and maintenance.

1 GENERAL NOTES

J200HA is an automatic hydraulic traffic bollard. The cylinder is moved by an hydraulic unit located inside the cylinder. The hydraulic release occurs by direct action on the hydraulic unit. As an alternative, if the optional solenoid valve is present, the release occurs automatically in the event of a power cut.

2 DESCRIPTION AND TECHNICAL SPECIFICATIONS


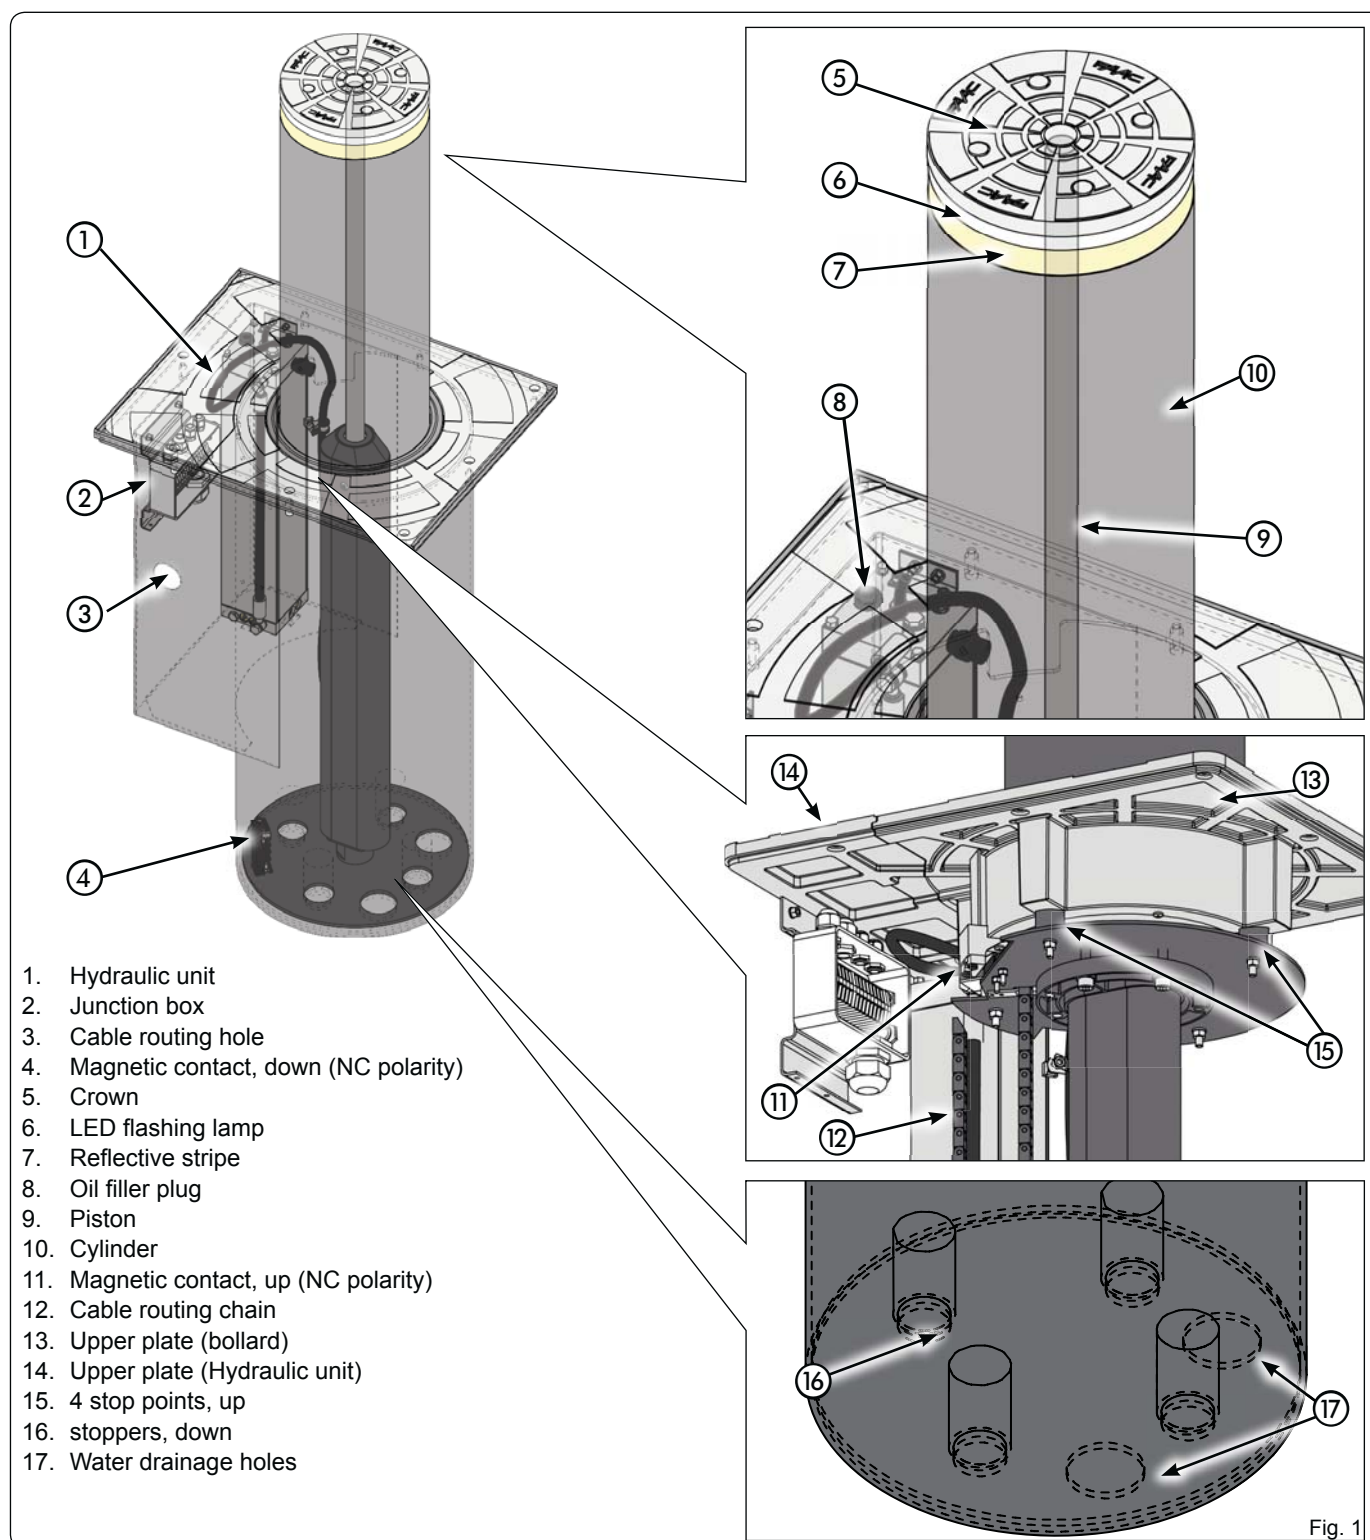


Fig. 1

Tab. A - Technical Specifications

MODEL	J200
Power supply	230 V~ 50 Hz
Max. absorbed power (W)	220
Max. force (N)	1800
Max. pump delivery (lpm)	3
Minimum lifting time (sec)	7
Minimum lowering time (sec)	7
Use temperature (°C)	-15 +55
Weight (Kg)	100
Oil quantity (l)	2,6
Protection class	IP56
Overall dimensions	See Fig.2
Capacitor (3)	16μF - 400V
Use frequency	Semi-Intensive use
R.O.T. at 55°C (min)	40
R.O.T. at 23°C (min)	100

3 DIMENSIONS

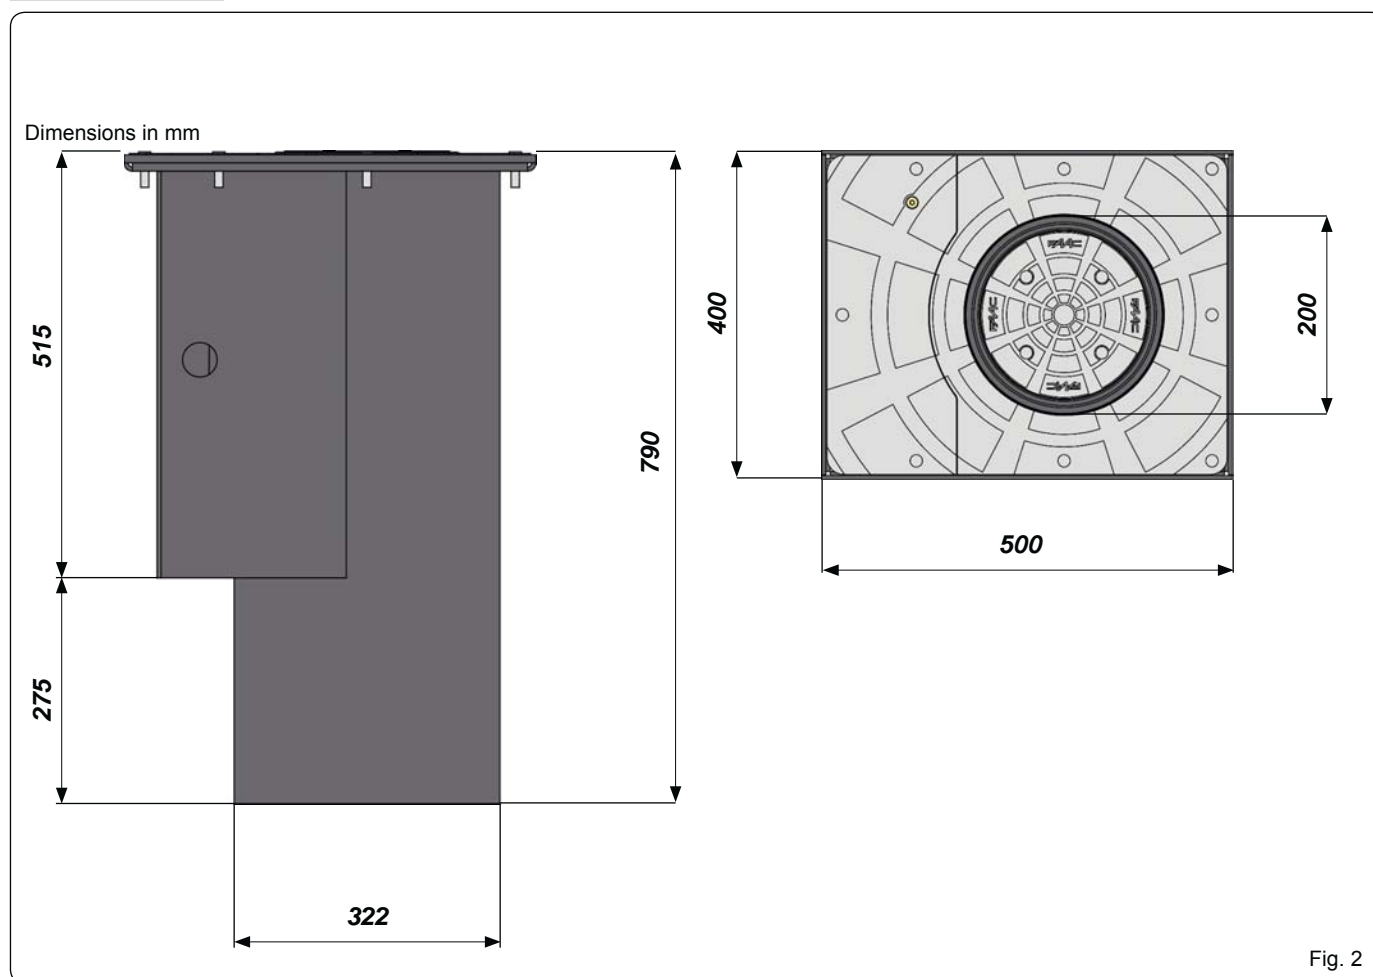

4 FACILITIES



Make sure that the place where the bollard is to be installed is not a cavity; if this is the case, partially protect the bollard with a drainage channel equipped with covering grid.



Dig up to a depth of about 1.1 m



The dig can be square and have a side of about 1 m (fig. 3). Otherwise it can be carried out using an earth drill with a diameter of 50 cm up to the depth mentioned above and widened in the last 30 cm giving a square shape of 1 m per side

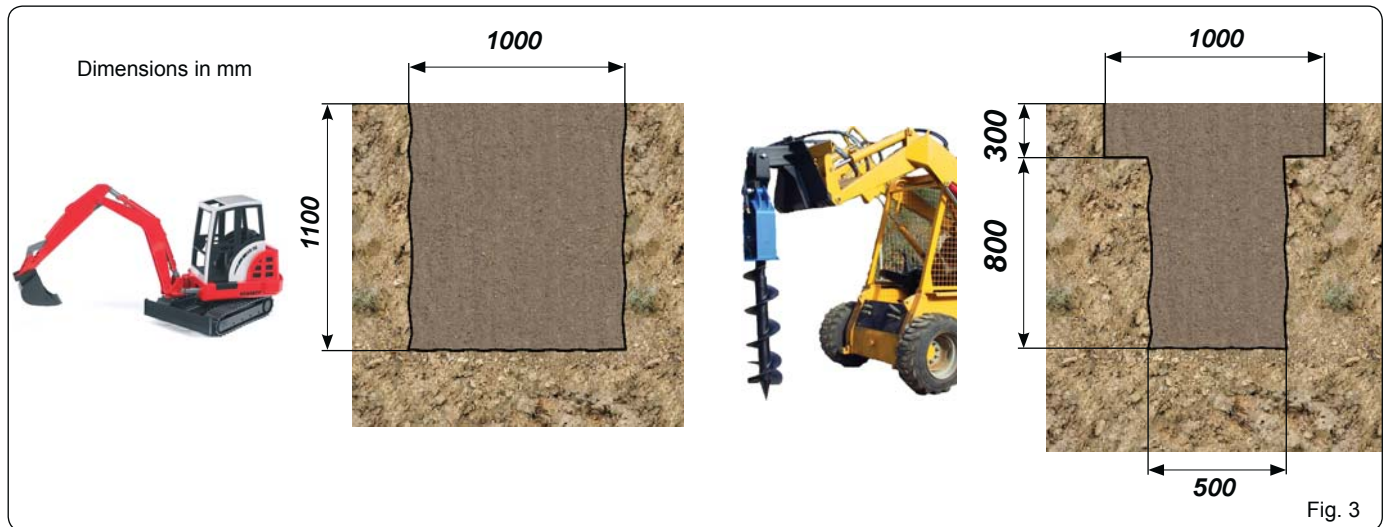


Fig. 3



Make sure that the ground is able to absorb water: pour about 40 l water and evaluate if draining requires less than 30 minutes. If this is not the case, discharge rain water by means of a pipeline with a diameter of 60mm connected to the drainage system or, as an alternative, connected to a pit, equipped with a drainage system (such as a motor pump), having a depth greater than the pit for the collection and drainage of rain water



Introduce gravel (grain diameter: approx. 20 mm.) to obtain a thickness of about 30 cm, taking care to compact it well to avoid future settlements



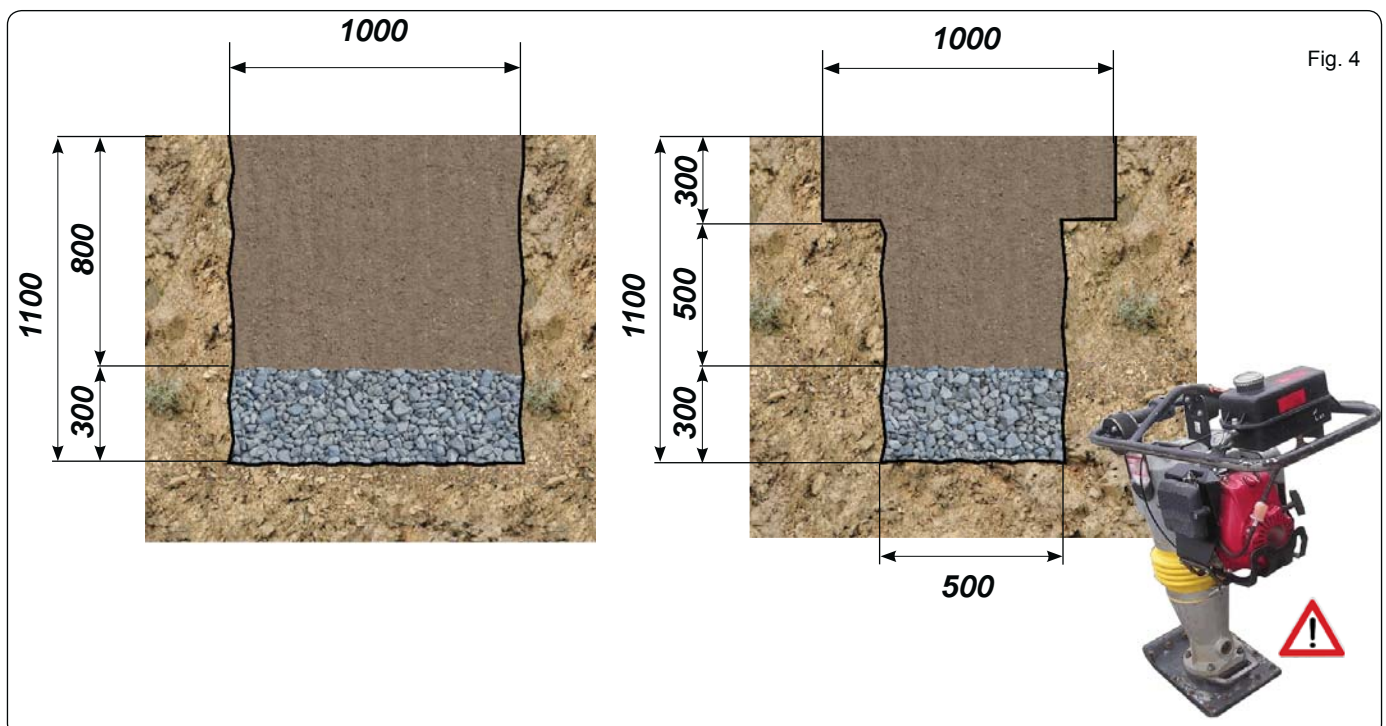


Fig. 4

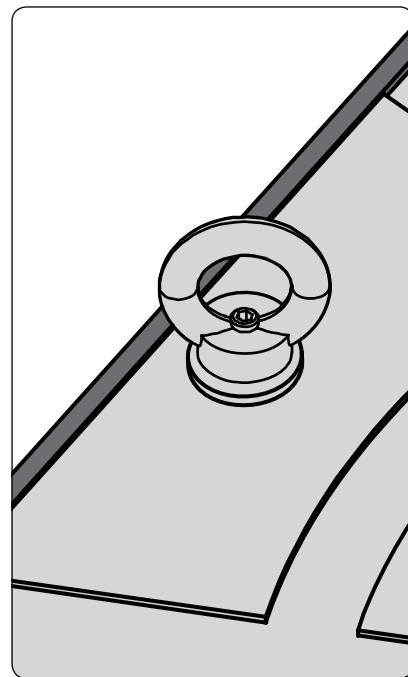


Place the two included grub screws on the threaded holes indicated in the following reference, then tighten the two eyebolts and use them to lift and position the frame.

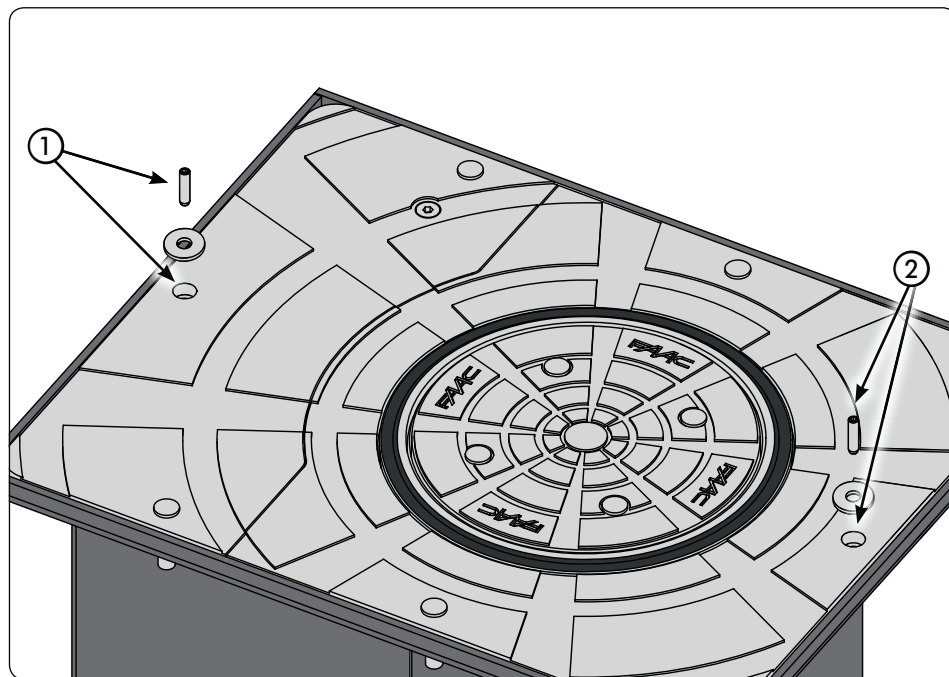

Place the bollard taking care to position it plumb. The top level of the frame must be approx. 10 mm higher than the floor surface (to limit the inlet of rainwater in the pit).

To reduce any stumble risk, level the pit to the street surface.

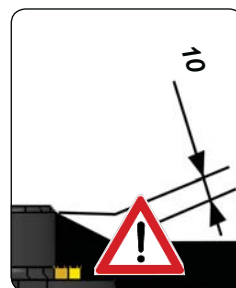

Respect the direction of transit as shown in fig.5.


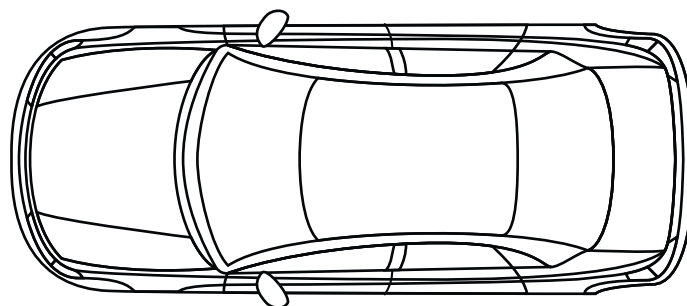


Fig. 5





With the bollard in place, enter additional 35mm of gravel, then lay a flexible sheat (external diameter = 40mm) from the bollard to the control unit.

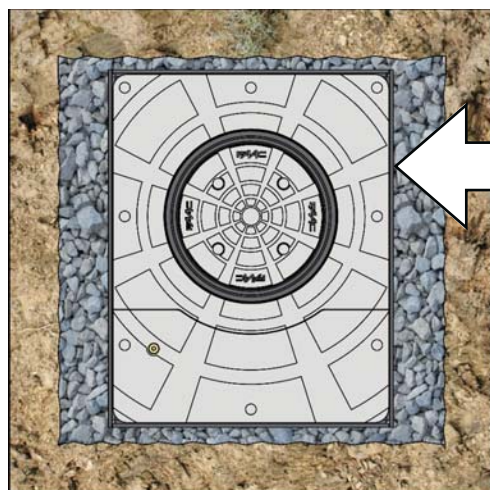

FLEXIBLE SHEATH
ø 40mm



Fig. 6

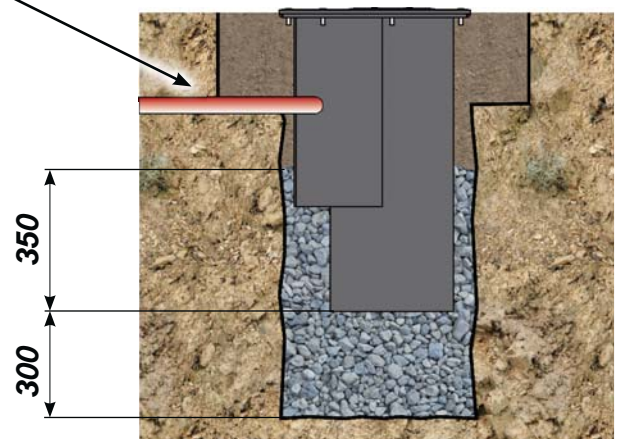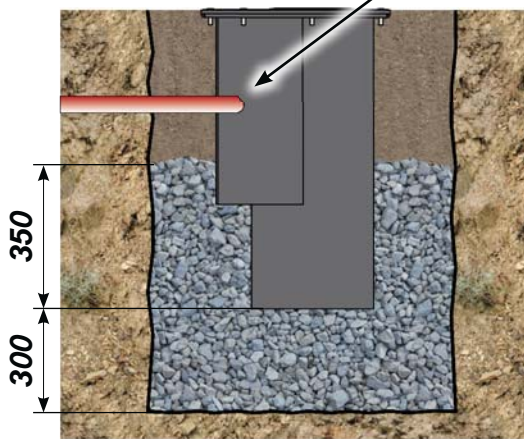


Cast concrete, type RCK25, all around the pit to secure it firmly up to about 10cm from the floor surface. After having secured the pit, finish the street surface using the same type of material.

Dimensions in mm



STREET SURFACE

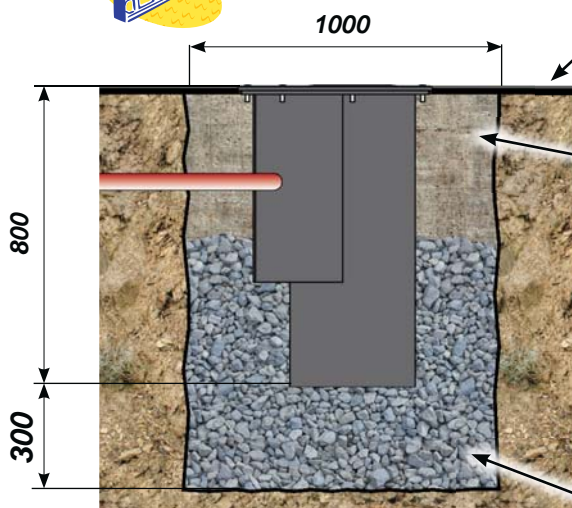

CONCRETE



GRAVEL

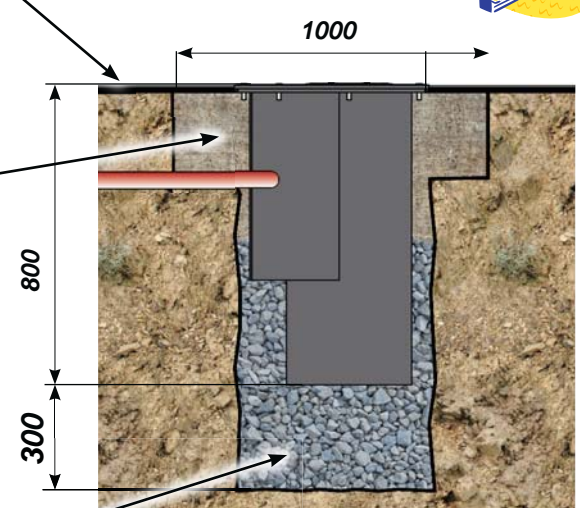


Fig. 7



Lay the pipelines that are necessary for the connection between the control unit and any additional device (i.e. traffic lights – inductive loops – card reader – etc.) and every other bollards, if any. Prepare the electrical connection and the earthing.




To connect the bollard to the control board, use a cable, type FG7OR-0.6/1kV-16G1.5, having a max. length of 50 m.

N.B.: every pipe must be laid in compliance with the current rules.



At the end, remove the protective film from the upper plates.

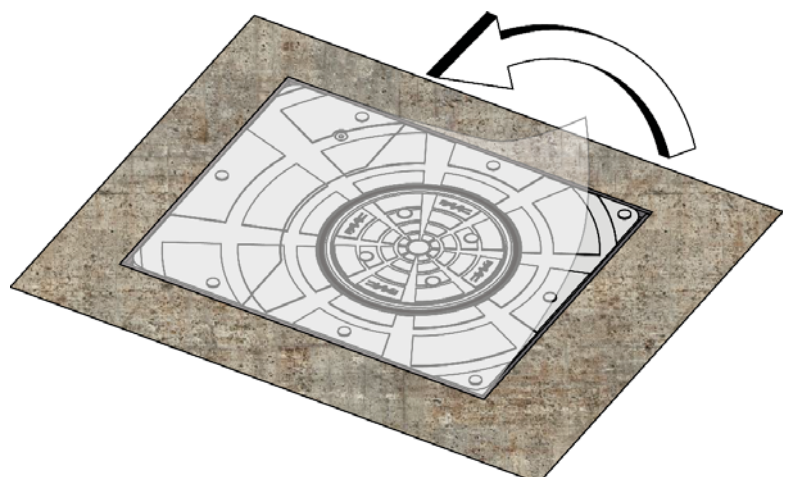

5 ELECTRIC WIRING

For the connection of the bollard to the control unit, use a multi-pole cable, type **FG7OR-0.6/ kV- 6G 1.5 (16 cables of 1.5mm²)** with **max. length of 50 m**. This cable must be laid inside a sheath \varnothing 40mm.

Perform the electric wiring in the junction box on the bollard side, as shown in the figure below. For easier wiring, the junction box can be removed.



Any additional accessory (i.e. photocells, opening/closing push-buttons, etc.), that have to be connected to the control unit, must compulsorily have double insulation.

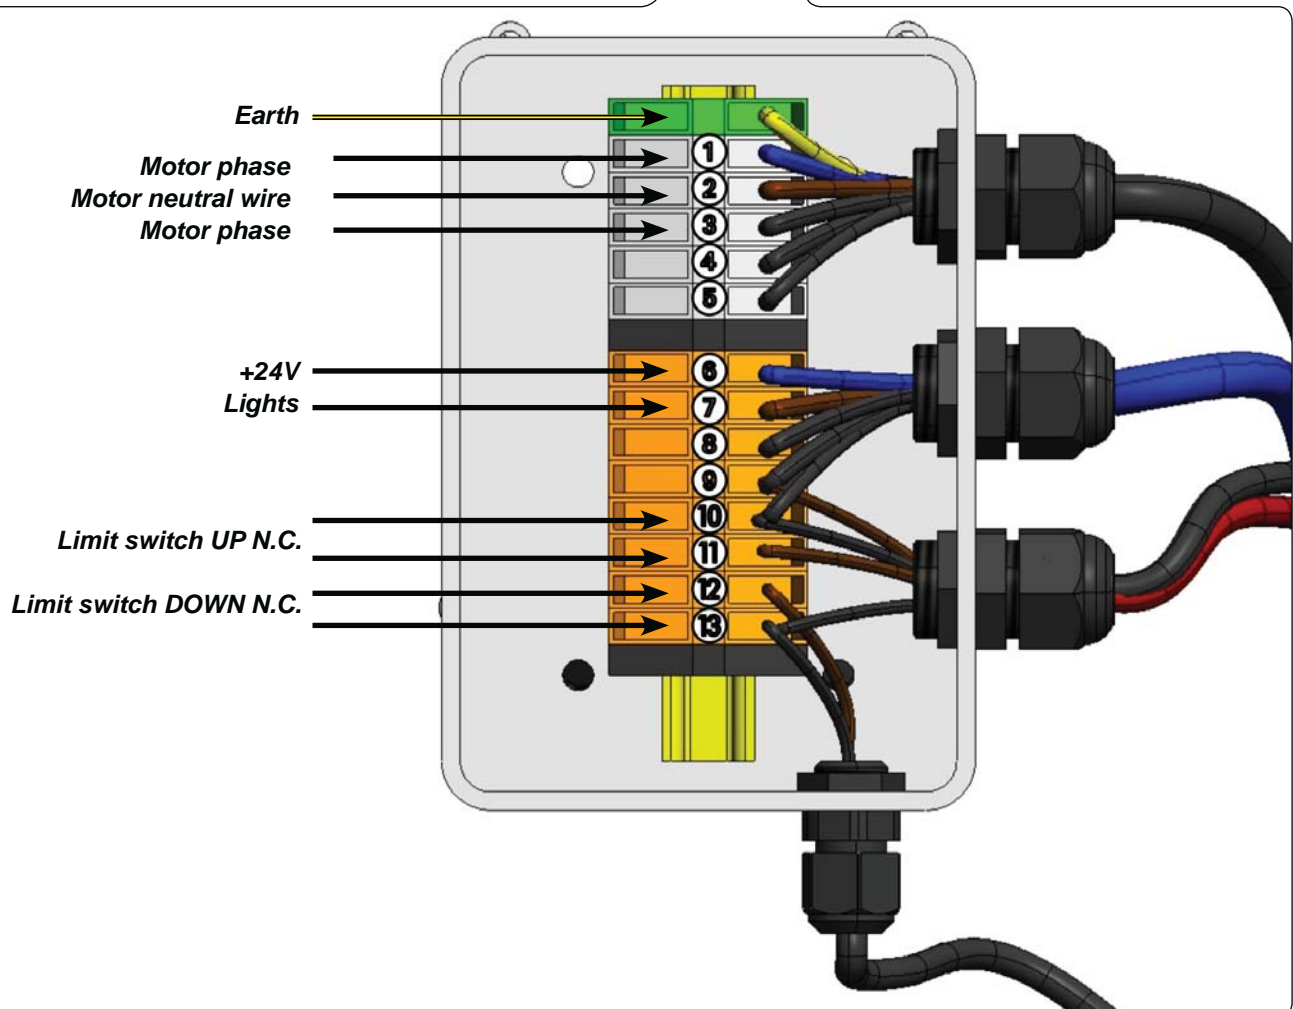
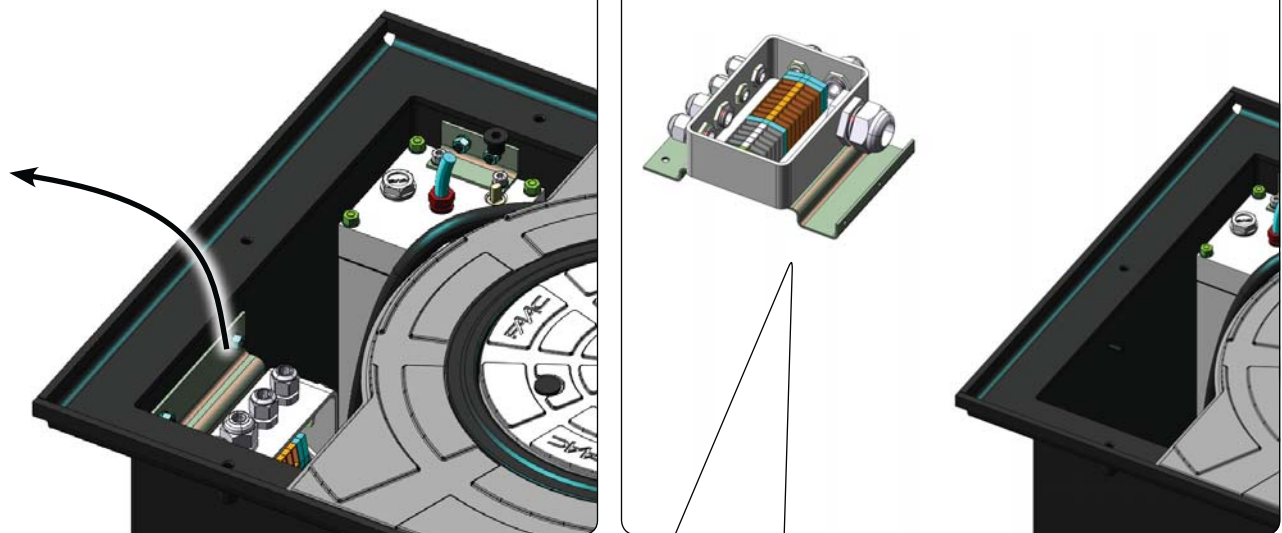


Fig. 8

6 MANUAL OPERATION

To lower the bollard by hand, you need to act on the release device.

1. Loosen the closing screw located on the bollard head (fig. 9 ref. ①).
2. Introduce the supplied key into the relevant hole.
3. Turn counter-clockwise to lower the bollard (fig. 9 ref. ②).

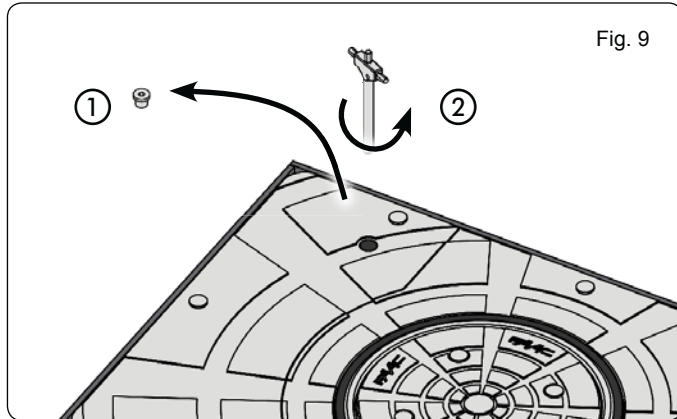


Fig. 9

7 AUTOMATIC OPERATION

To restore the automatic operation:

1. Introduce the supplied key into the relevant hole.
2. Turn clockwise till end of stroke (fig. 10 ref. ①).
3. Tighten again the closing screw on the bollard head (fig. 10 ref. ②).

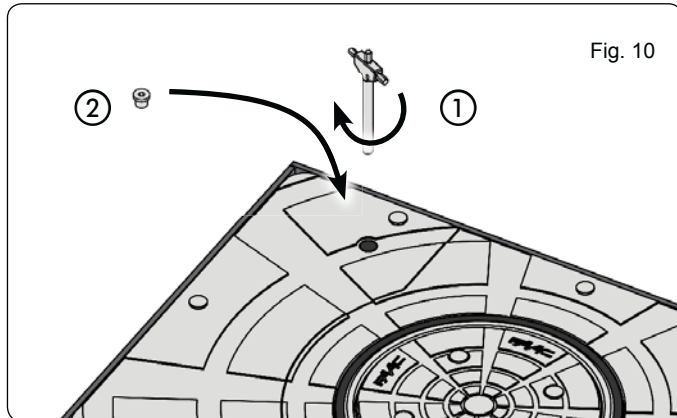


Fig. 10

8 STANDARD PROCEDURE FOR A 6-MONTHLY VERIFY

Ordinary maintenance standard procedure:

1. Clean the pit and remove any settled material by suction
2. Clean the water drainage systems on the pit bottom
3. Check (and repair, if necessary) any oil leakages from the driving piston
4. Check the correct tightening of the bollard screws
5. Clean the driven cylinder and touch up paint, if necessary
6. Check the hydraulic unit and top up oil, if necessary. Check the setting of the operating pressure
7. Check and set, if installed, the functions of the safety pressure switch (40 Kg.)

We advise to perform the above mentioned operation at least every six months.

JE275 CONTROL UNIT

The JE275 control unit is supplied with the control board 624 BLD and the housing, model E.



Always cut the power supply before performing any intervention on the control unit (connections, maintenance).

- Install a differential thermal-magnetic switch with suitable threshold (0.03A) upstream of the system.

- Connect the earth cable to the relevant terminal on the connector J9 of the unit (see figure below).

- Check if the power disconnecting switch is provided with locking key except if it's installed under operator/maintenance man control.

- The control unit installation must be done between 0,4 m and 2,0 m height

9 ELECTRICAL CONNECTIONS

624BLD BOARD SIDE

BOLLARD SIDE


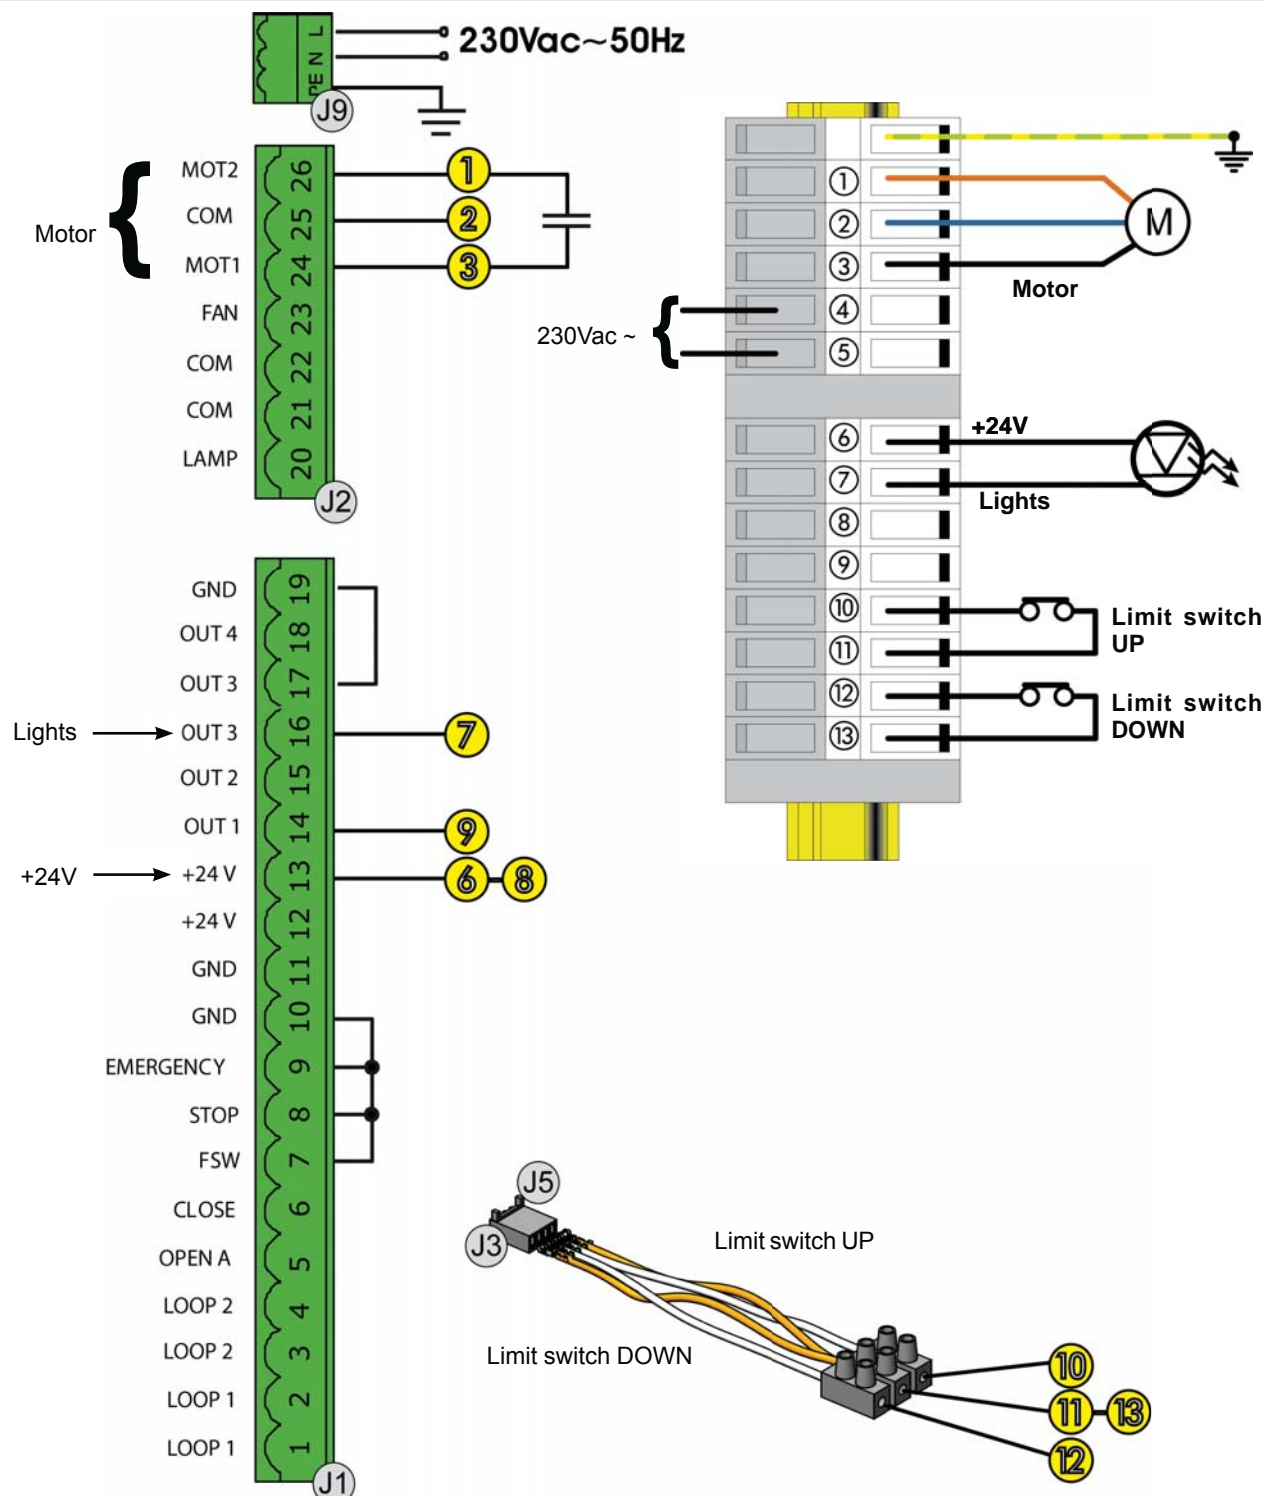


Fig. 11

10 PRE-SETTING SELECTION

After having connected the board and after having supplied it with power according to the previous paragraph, you must select the work pre-setting for the bollard J200HA following the operations below:

1. Enter the 1st level programming, holding down key **F** on the board. The initials **dF** will appear on the display.
2. Release key **F** and select **07** with the key **+**
3. Simultaneously press keys **F** and **-** to exit programming and save the changes performed.

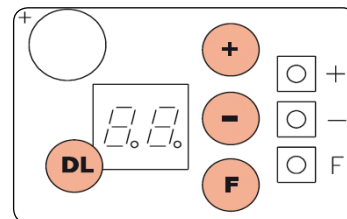

For any further information on the unit programming, please refer to the relevant instructions.

11 POSITIONING THE LOOPS

Below you will find some examples for the realization of magnetic loops with one or more bollards:

1. Installation of a single bollard and two magnetic loops to detect vehicle transit.
2. Installation of a single bollard and of a magnetic loop to protect the perimeter.
3. Installation of four bollards (on a single 624BLD) and four loops to protect large passages
4. Installation of eight bollards (4 on 624BLD MASTER board + 4 on 624BLD SLAVE board, see par. 12.2) and eight loops to protect large passages

The loops must be realized according to the instructions provided for the magnetic detector (control unit); they must be connected each other in series or you can use more magnetic detectors and connect the relevant relay contacts in series.

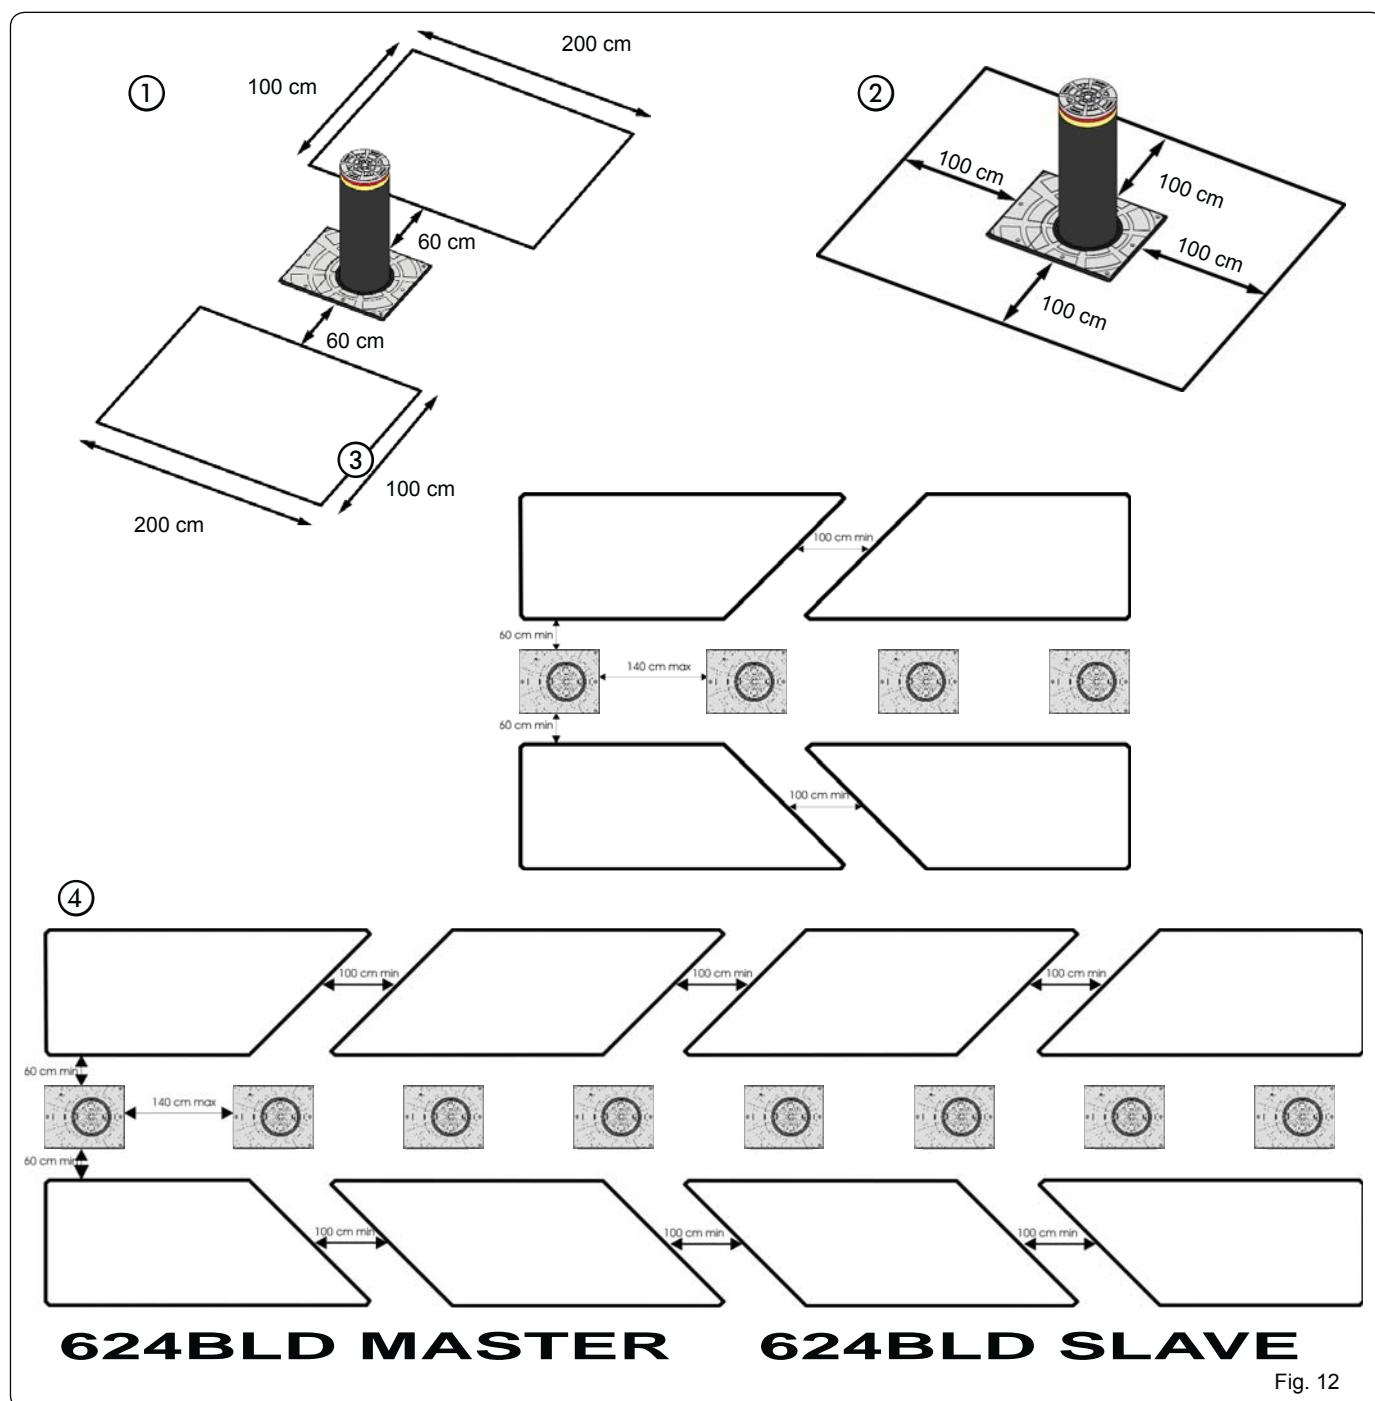


Fig. 12

12 CONNECTING MORE BOLLARDS

12.1 CONNECTION OF UP TO 4 BOLLARDS ON A SINGLE BOARD

Up to 4 bollards can be connected to the same unit and operate simultaneously. Follow the instructions below for a correct wiring and operation (par. 12.3).

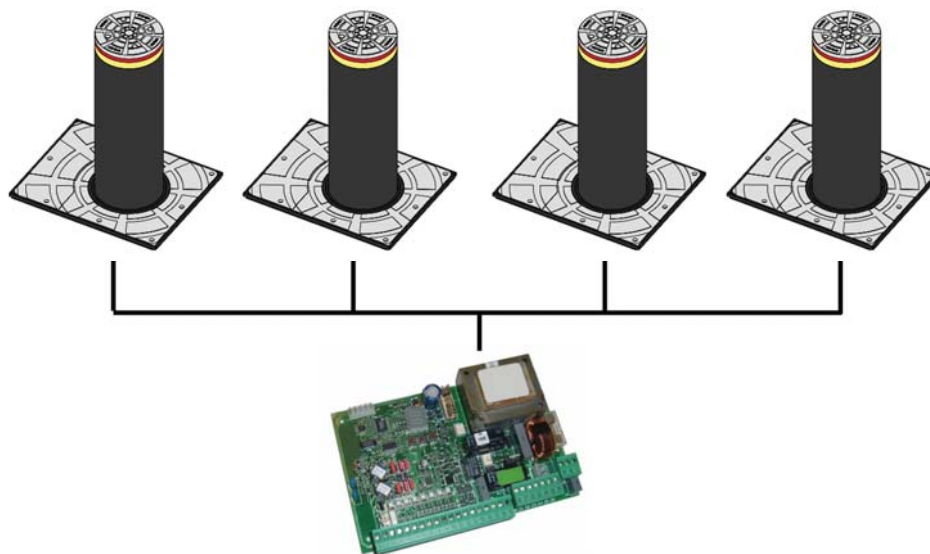


Fig. 13

12.2 CONNECTION OF UP TO 8 BOLLARDS ON TWO 624BLD MASTER – SLAVE CONNECTION

You can connect 2 624BLD units in a MASTER-SLAVE configuration for the simultaneous control of 8 bollards. Follow the instructions below for a correct wiring and operation (par.12.4).

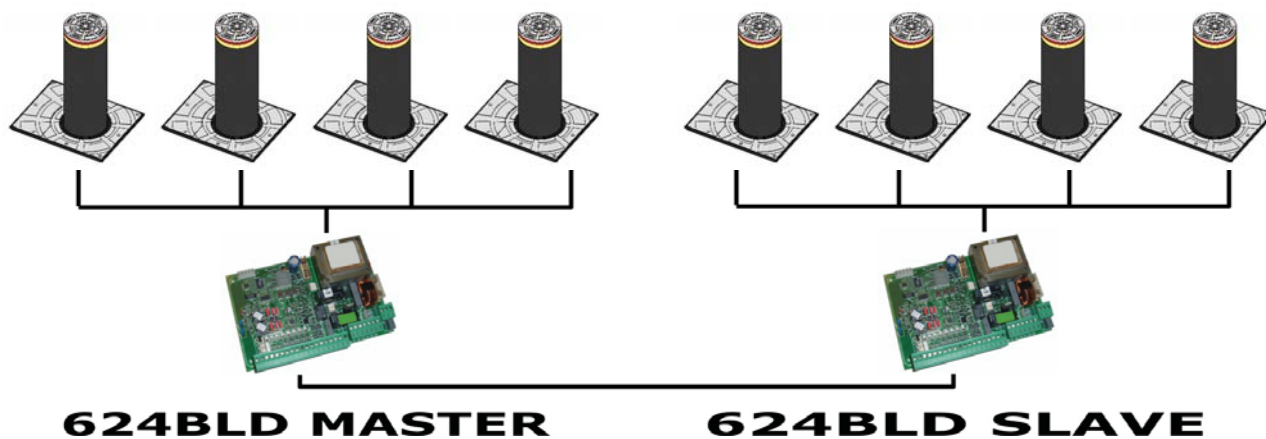


Fig. 14

12.3 WIRING OF UP TO 4 BOLLARDS ON A SINGLE BOARD

Connection of 4 motors

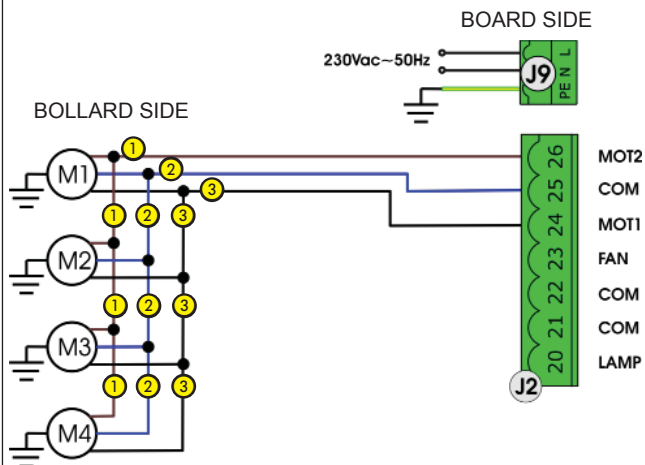


Fig. 15

Connection of lights / buzzer

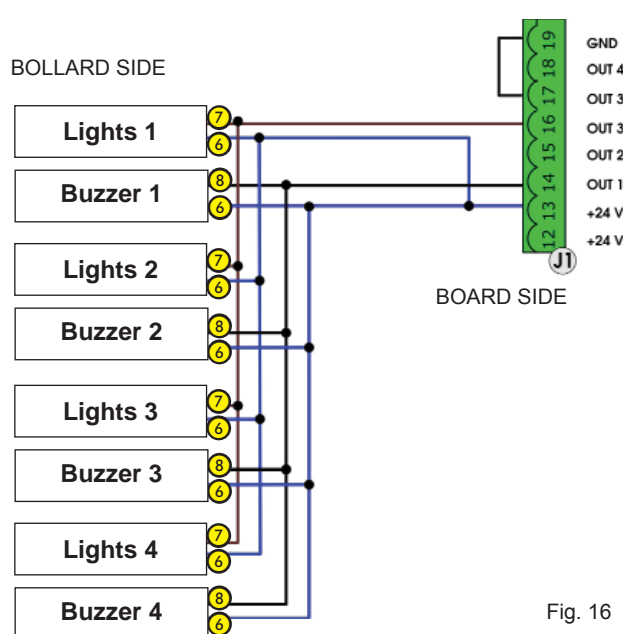


Fig. 16

Connection of 4 limit switches DOWN in parallel.
The bollards stop when all 4 limit switches are engaged

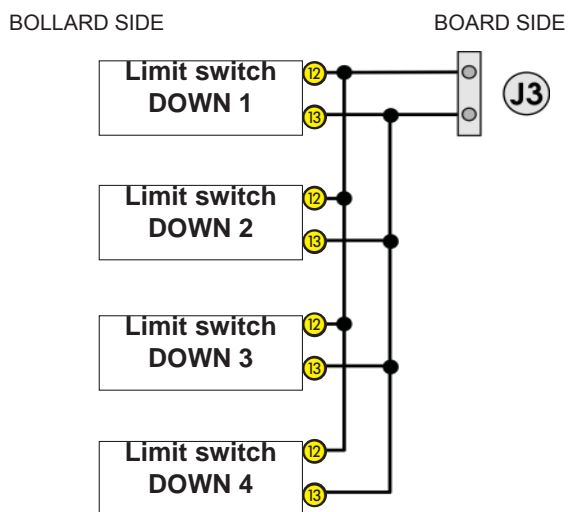


Fig. 17

Connection of 4 limit switches UP in parallel.
The bollards stop when all 4 limit switches are engaged

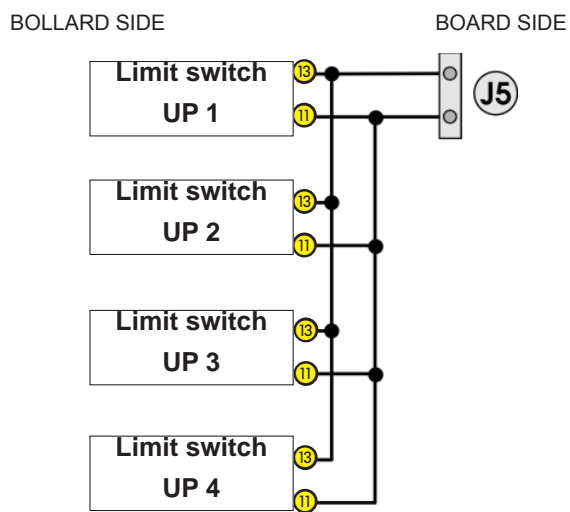


Fig. 18

Connection of 4 pressure switches in series.
The first operation of a pressure switch causes the reversal of all bollards

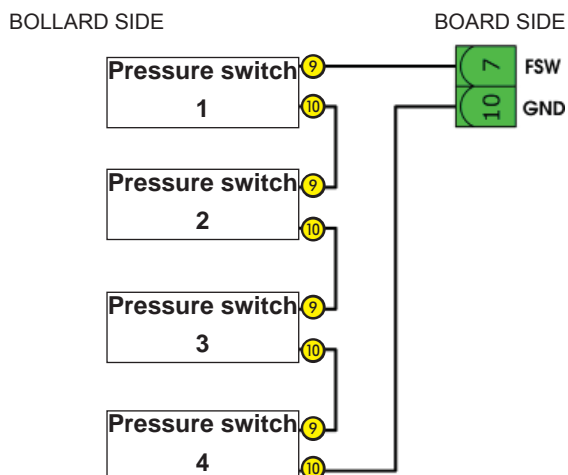


Fig. 19

12.4 WIRING OF UP TO 8 BOLLARDS ON TWO 624BLD IN MASTER - SLAVE CONNECTION

ENGLISH

624BLD MASTER 624BLD SLAVE

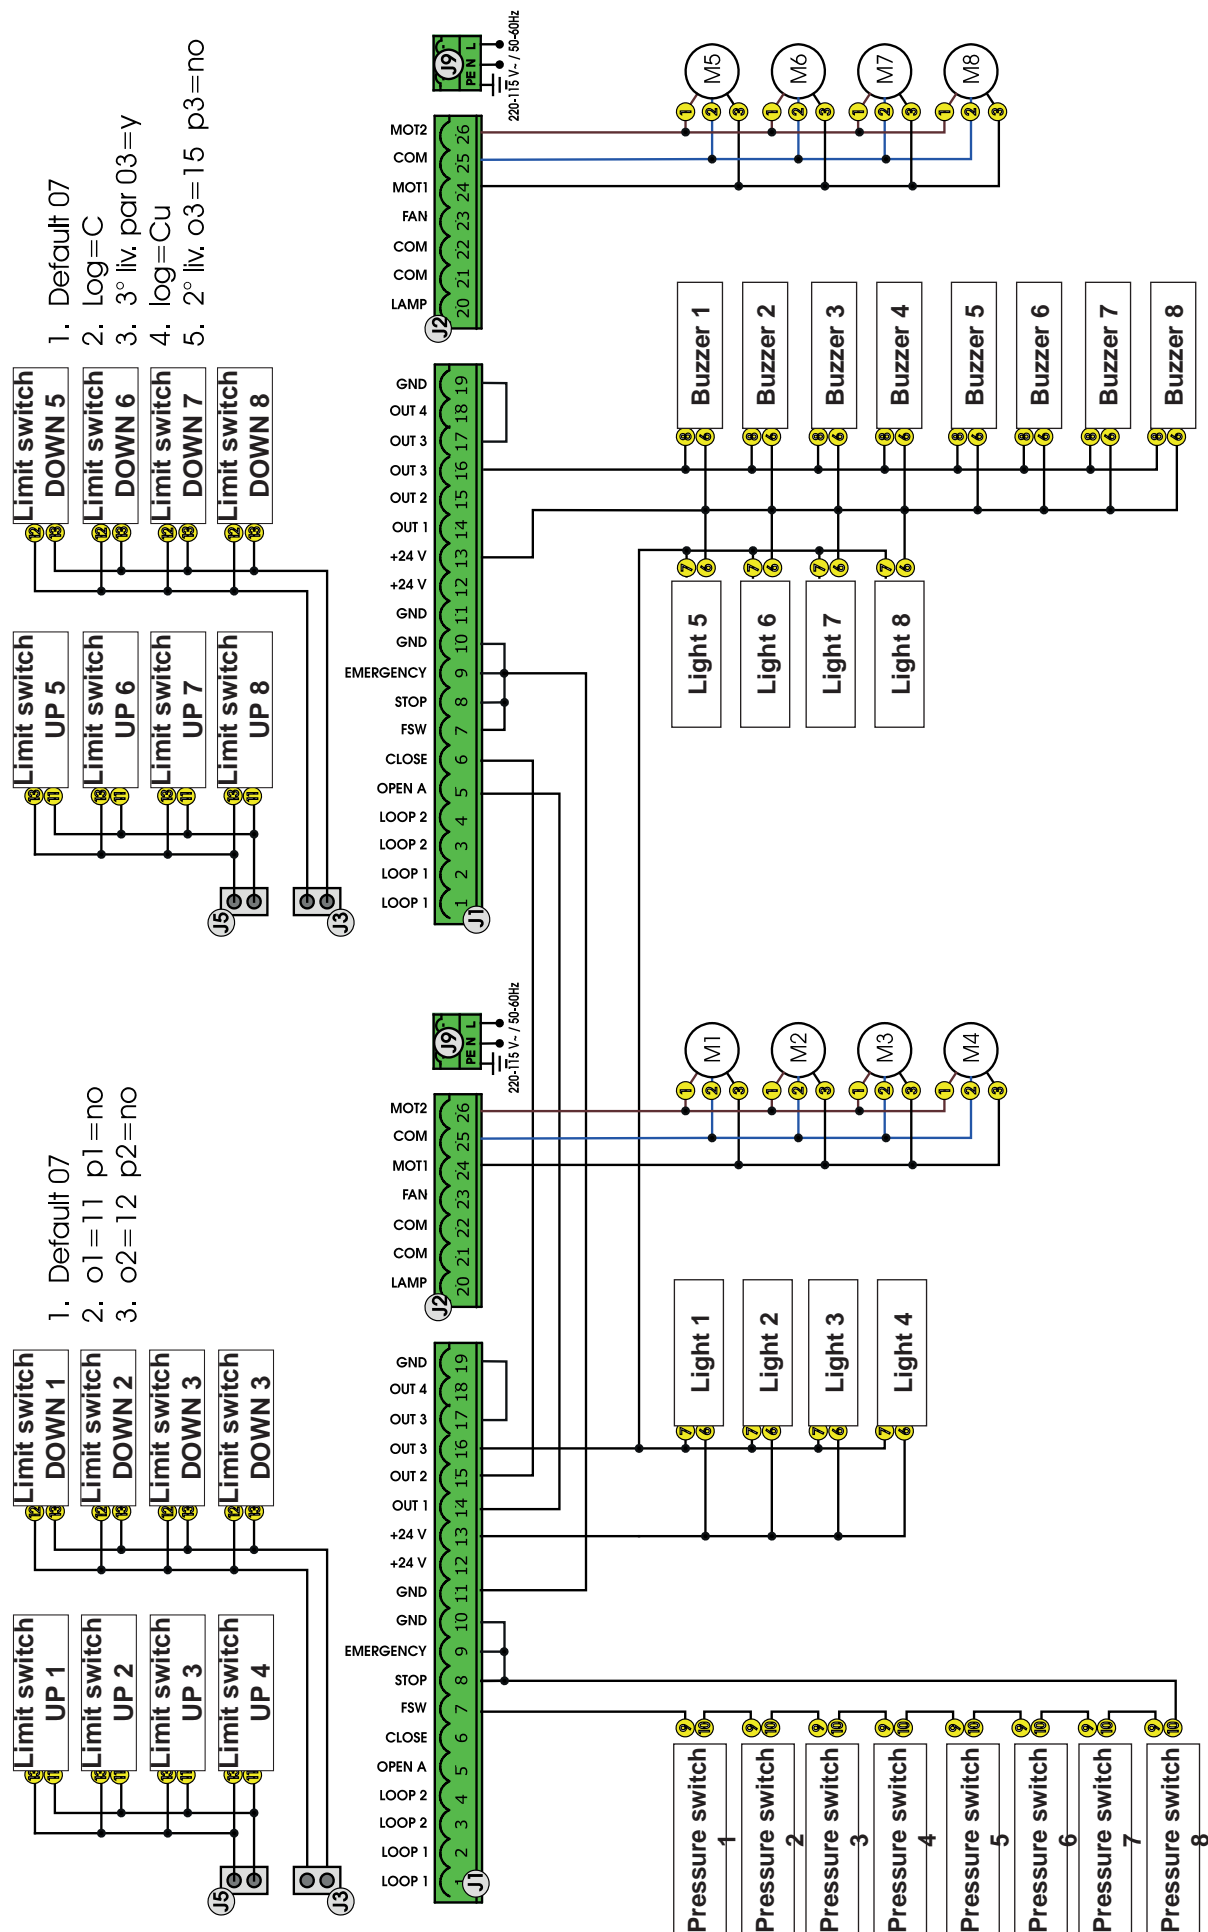


Fig. 20

13 TROUBLESHOOTING


The indications below will help you locate and solve particular conditions.

	CONDITION	ADVICE
1	The bollard rises for a few centimetres and then lowers immediately	<ul style="list-style-type: none"> Make sure you have selected the default no. 7 on the 624BLD board Check if the safety pressure switch wiring was performed correctly, (optional, see the related instructions) Make sure that the LED DL3 (FSW) on the 624BLD board remains ON for the whole movement Adjust the pressure switch (if installed) Replace the pressure switch
2	As soon as the bollard reaches the position, it reverses immediately	<ul style="list-style-type: none"> Check if the wiring of the limit stops was performed correctly, see fig. 11 or fig. 18 Make sure that the up position limit stops are correctly positioned, see ref. 11 fig.1
3	The bollard does not rise, it remains down.	<ul style="list-style-type: none"> Make sure you have selected the default no. 7 on the 624BLD board Check if the wiring of the solenoid valve was performed correctly, (optional, see the related instructions) Check if the solenoid valve was adjusted correctly Replace the solenoid valve Make sure the bollard is hydraulically locked, see par. 7
4	The bollard remains up in closed position.	<ul style="list-style-type: none"> Make sure nothing between the cylinder and the sliding bush prevents the bollard movement; try and shake the cylinder to facilitate its downstroke
5	The buzzer and the LED flashing lamp do not operate	<ul style="list-style-type: none"> Make sure you have selected the default no. 7 on the 624BLD board Check if the power connector under the head was fitted correctly


14 CLEANING / UNMOUNTING PROCEDURE

In case you need to unmount / clean the bollard, proceed as follows. Each step (to be followed in sequence) allows for the access to a different part of the bollard:


- 1) Top limit switch replacement
- 2) Headlight replacement
- 3) Cylinder removal for internal cleaning.
- 4) Piston removal and access to lower limit switch

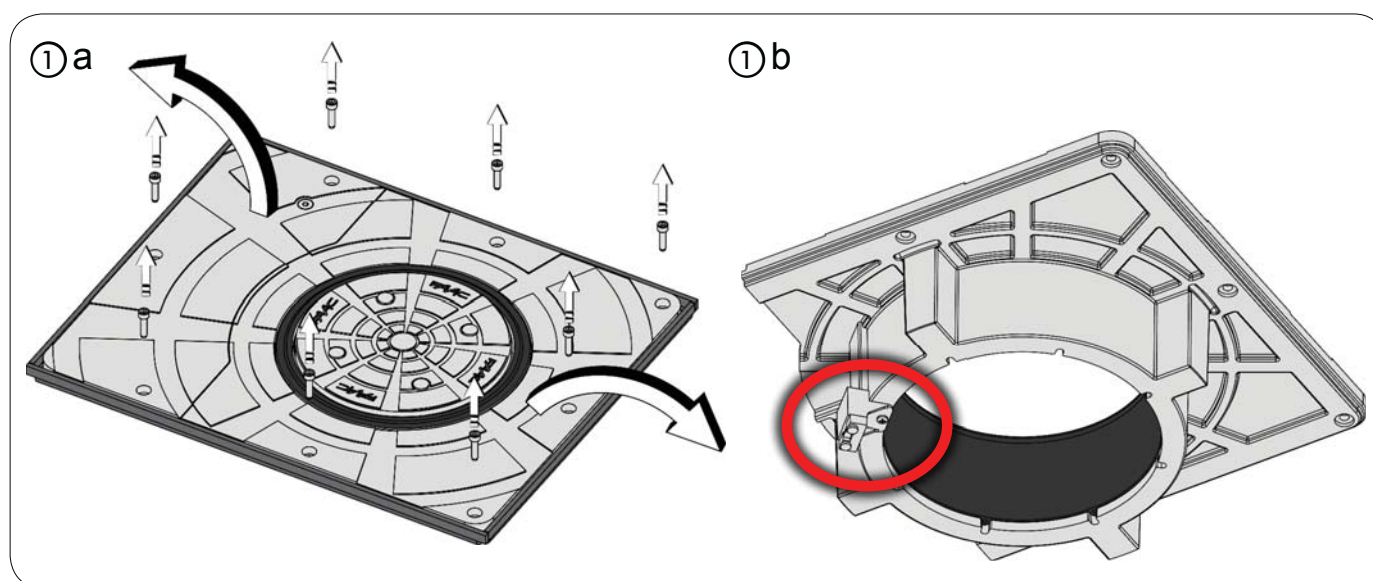


② a

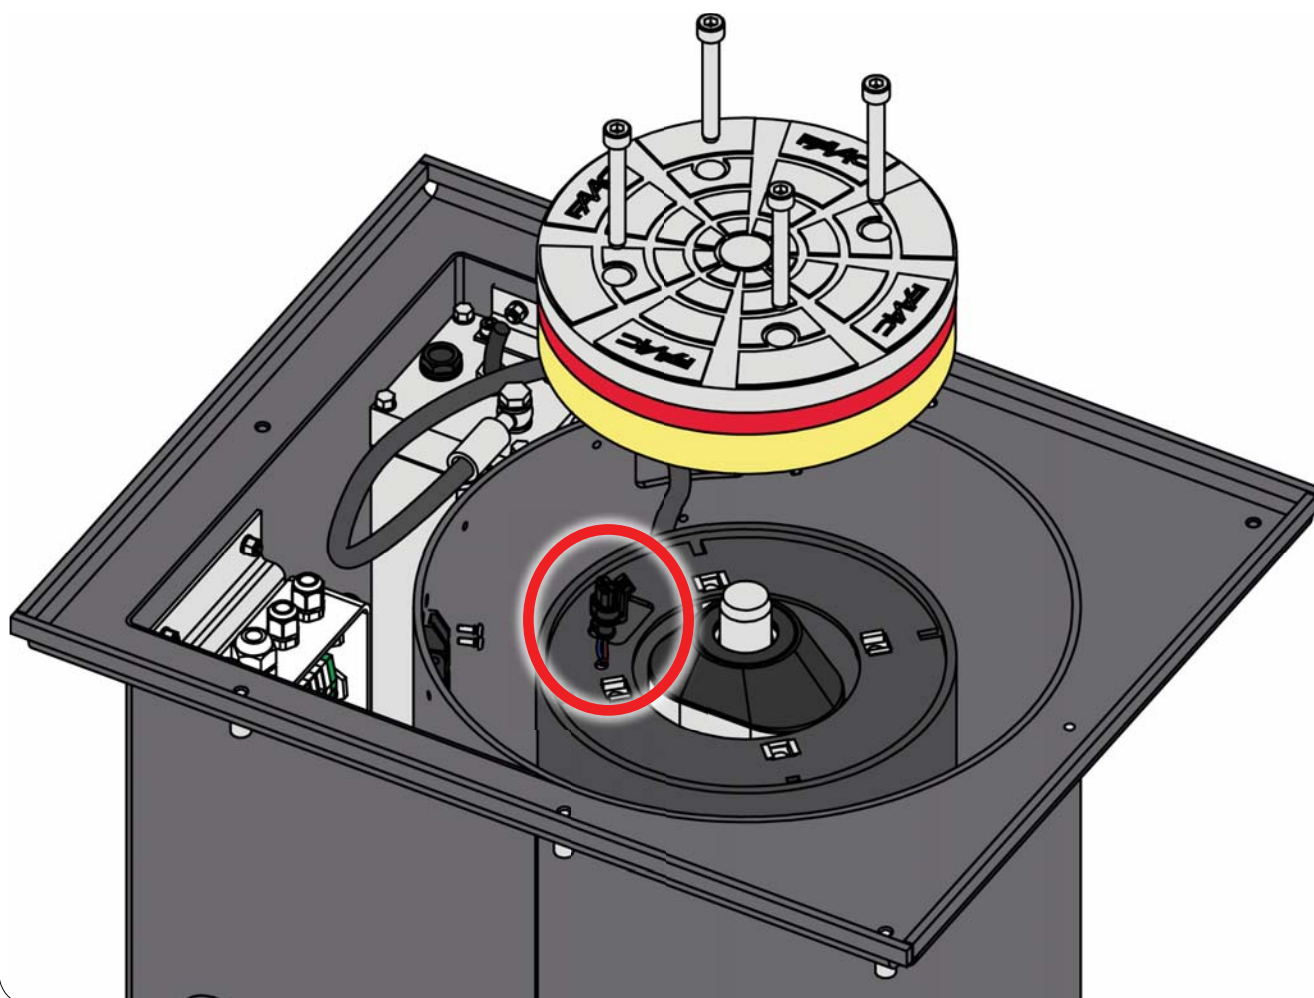

② b

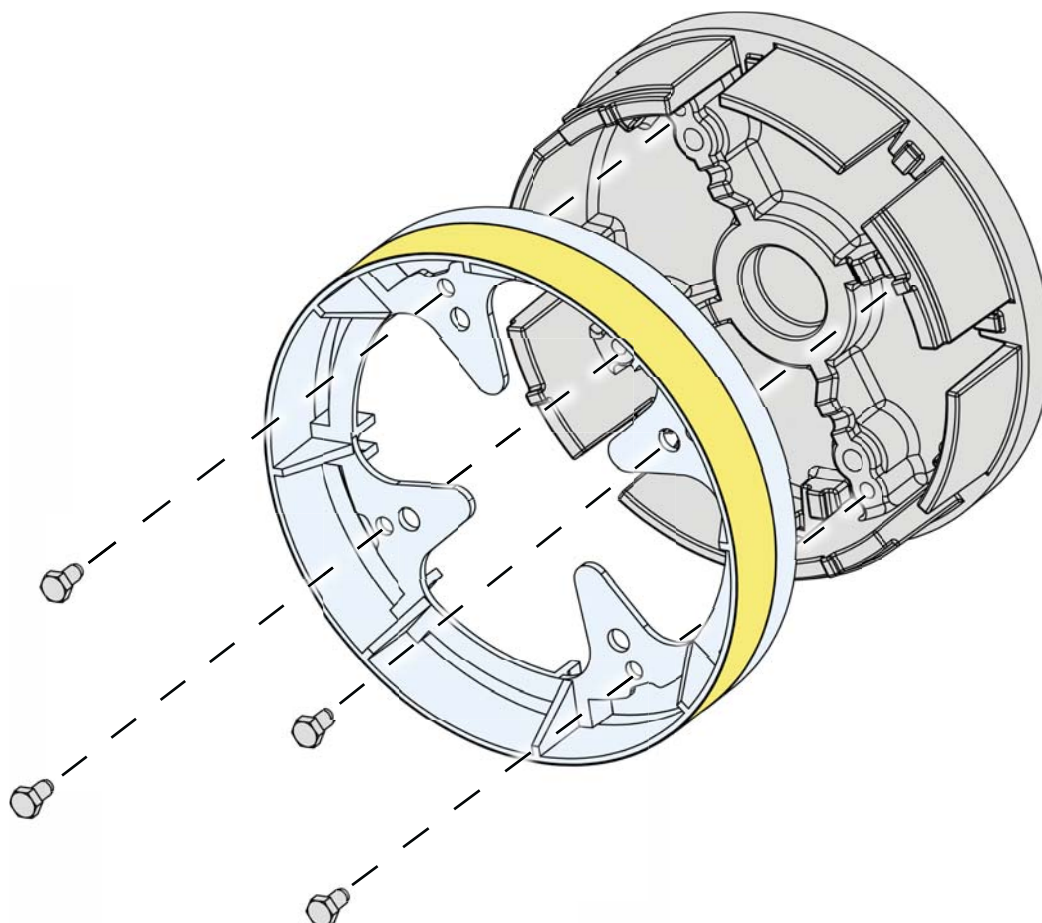


④

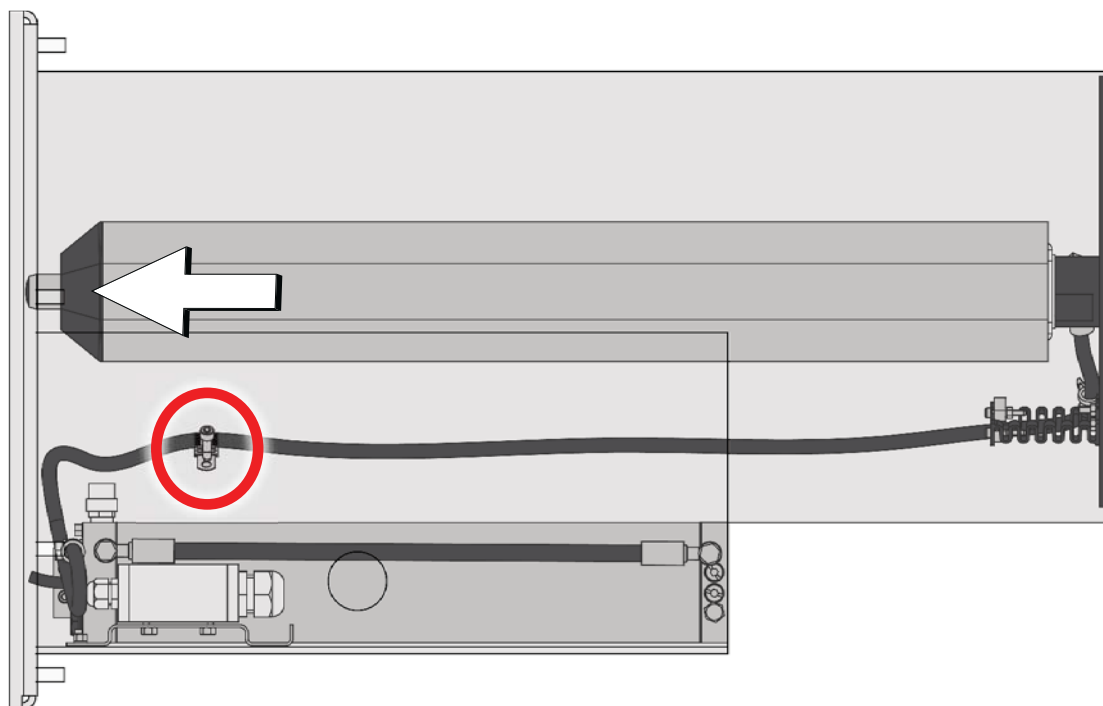

N.B. Remove the oil pipe clamp before extracting the piston

③

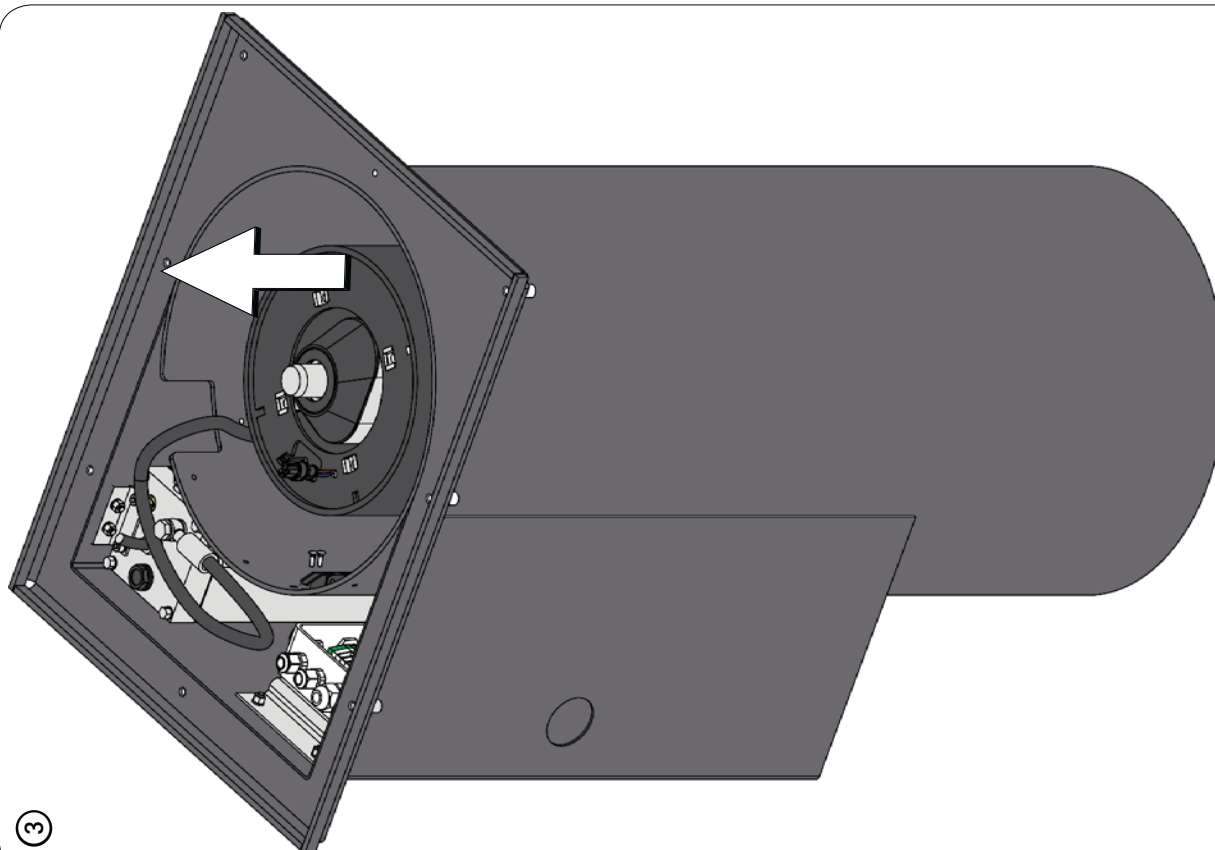

N.B. Remove the two chain fixing screws before extracting the cylinder

SEDE - HEADQUARTERS

FAAC S.p.A.

Via Calari, 10
40069 Zola Predosa (BO) - ITALY
Tel. +39 051 61724 - Fax +39 051 758518
www.faac.it - www.faacgroup.com

ASSISTENZA IN ITALIA

SEDE

tel. +39 051 6172501
www.faac.it/ita/assistenza

MILANO

tel +39 02 66011163
filiale.milano@faacgroup.com

PADOVA

tel +39 049 8700541
filiale.padova@faacgroup.com

ROMA

tel +39 06 41206137
filiale.roma@faacgroup.com

TORINO

tel +39 011 6813997
filiale.torino@faacgroup.com

FIRENZE

tel. +39 055 301194
filiale.firenze@faacgroup.com

SUBSIDIARIES

AUSTRIA

FAAC GMBH
Salzburg, Austria
tel. +43 662 8533950
www.faac.at

FAAC TUBULAR MOTORS
tel. +49 30 56796645
faactm.info@faacgroup.com
www.faac.at

GERMANY

FAAC GMBH
Freilassing, Germany
tel. +49 8654 49810
www.faac.de

FAAC TUBULAR MOTORS
tel. +49 30 5679 6645
faactm.info@faacgroup.com
www.faac.de

BENELUX

FAAC BENELUX NV/SA
Brugge, Belgium
tel. +32 50 320202
www.faacbenelux.com

FAAC TUBULAR MOTORS
Schaapweg 30
NL-6063 BA Vlodrop, Netherlands
tel. +31 475 406014
faactm.info@faacgroup.com
www.faacbenelux.com

AUSTRALIA

FAAC AUSTRALIA PTY LTD
Homebush – Sydney, Australia
tel. +61 2 87565644
www.faac.com.au

INDIA

FAAC INDIA PVT. LTD
Noida – Delhi, India
tel. +91 120 3934100/4199
www.faacindia.com

SWITZERLAND

FAAC AG
Altdorf, Switzerland
tel. +41 41 8713440
www.faac.ch

CHINA

FAAC SHANGHAI
Shanghai, China
tel. +86 21 68182970
www.faacgroup.cn

NORDIC REGIONS

FAAC NORDIC AB
Perstorp, Sweden
tel. +46 435 779500
www.faac.se

POLAND

FAAC POLSKA SP.ZO.O
Warszawa, Poland
tel. +48 22 8141422
www.faac.pl

UNITED KINGDOM

FAAC UK LTD.
Basingstoke - Hampshire, UK
tel. +44 1256 318100
www.faac.co.uk

SPAIN

F.A.A.C. SA
San Sebastián de los Reyes.
Madrid, Spain
tel. +34 91 6613112
www.faac.es

RUSSIA

FAAC RUSSIA LLC
Moscow, Russia
tel. +7 495 6462429
www.faac.ru

FRANCE

FAAC FRANCE
Saint Priest - Lyon, France
tel. +33 4 72218700
www.faac.fr

U.S.A.

FAAC INTERNATIONAL INC
Jacksonville, FL - U.S.A.
tel. +1 904 4488952
www.faacusa.com

MIDDLE EAST

FAAC MIDDLE EAST BRANCH
Dubai Airport Free Zone - Dubai, UAE
tel. +971 42146733
www.faac.ae

FAAC FRANCE - AGENCE PARIS
Massy - Paris, France
tel. +33 1 69191620
www.faac.fr

FAAC INTERNATIONAL INC
Fullerton, California - U.S.A.
tel. +1 714 446 9800
www.faacusa.com

FAAC FRANCE - DEPARTEMENT VOLETS
Saint Denis de Pile - Bordeaux, France
tel. +33 5 57551890
fax +33 5 57742970
www.faac.fr

